

User Manual

17" Panel Mount Industrial Monitor Revision B

Model Numbers: HIS-ML17- _ _ _ B



Table of Contents

SAFETY AND REGULATORY INFORMATION	3
Warning	
FCC Notice	3
CONTROL PANEL BUTTONS AND INDICATORS	4
OSD FUNCTIONS	6
Picture	6
Color	
Image	
On-Screen Display (OSD)	
SetupInformation	
INSTALLATION INSTRUCTIONS	
Preparing for Installation	9
Installation into Panel	
TOUCHSCREEN DRIVER INSTALLATION	11
CLEANING	12
TROUBLESHOOTING	13
DRAWINGS	15
SPECIFICATIONS	17
Display	17
Video	
Electrical	
Environmental	
Functional	
Enclosure	
Physical	
VGA Pin assignment	
FACTORY PRESET TIMING	21
WARRANTY STATEMENT	22

Safety and Regulatory Information

Warning

To prevent fire or shock hazard, do not expose the unit to rain or moisture. Dangerously high voltages are present inside the unit. Do not disassemble the unit. Refer servicing to qualified personnel only.

This equipment is not intended for use in critical applications where its failure to operate would create immediate life threatening circumstances. Applications including but no limited to nuclear reactor control, aerospace navigation systems and life support systems are not appropriate for this product.

This product is intended to be mounted in a suitable cabinet or other enclosure. The NEMA 4, 4x or 12 ratings are applicable only when properly installed in a like rated enclosure.

This product is a UL Recognized Component and must be used with a listed computer.

FCC Notice

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense. Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the device.

Control Panel Buttons and Indicators

Control Panel Button	Mode	Description	
MENU	Always	Opens the OSD menu. Also used to exit the OSD menu or return to the previous menu.	
		MagicBright: Provides an optimum viewing environment depending on the contents of the image you are watching. Six different modes are available. Each mode has its own pre-configured brightness value:	
		Text: For documentation or work involving heavy text	
	When the OSD Menu is	Internet: For working with a mixture of images such as text and graphics	
		Entertain: For watching motion pictures such as a DVD	
-	NOT Displayed	Game: For moving pictures such as a video game	
		5) Sport : For moving pictures such as sports	
	6) Custom : Although the values are carefully chosen by our engineers, the pre-configured values may not be comfortable to your eyes depending on your taste. If this is the case, adjust the Brightness and Contrast using the OSD menu.		
		Note : Pressing the menu button for more than 5 seconds will lock the OSD function, repeat to unlock.	
	When the OSD Menu is Being Displayed	Adjusts items in the menu DOWN .	

Control Panel Button	Mode	Description
•	When the OSD Menu is NOT Displayed	Push to adjust brightness.
+	When the OSD Menu is Being Displayed	Adjusts items in the menu UP .
ENTER	When the OSD Menu is Being Displayed	Activate a highlighted menu item.
AUTO	Always	Use this button for auto adjustment of the display. Auto adjustment allows the monitor to self-adjust to the incoming video signal. The values of fine, coarse and position are adjusted automatically. Auto adjustment will also occur automatically each time the computer resolution is changed.
POWER		Use this button to turn the monitor on and off.
POWER INDICATOR		This light glows green during normal operation, and blinks green once as the monitor saves your adjustments.

OSD Functions

Picture

Menu	Description	
Brightness	Direct Access Feature : When OSD is not on the screen, push the button to adjust brightness.	
Contrast	Adjust the contrast.	

Color

Menu	Description	
Menu	Off: Returns to the original mode Demo: The screen before applying MagicColor appears on the right and the screen after applying MagicColor appears on the left Full: Displays not only vivid natural color but also more realistic natural skin color with clarity Intelligent: Displays vivid natural color with clarity	
MagicColor	MagicZone: MagicZone ensures clear and sharp display of animated multimedia or photo images by enhancing the brightness, sharpness, saturation, hue of a certain area on the screen • Hue - adjust the hue of the MagicZone • Saturation - adjust the saturation of the MagicZone • Brightness - adjust the brightness of the MagicZone • Sharpness - adjust the sharpness of the MagicZone • H-Position - move the MagicZone horizontally • V-Position - move the MagicZone vertically • H-Size - adjust the horizontal size of the MagicZone • V-Size - adjust the vertical size of the MagicZone	
Color Tone	The tone of the color can be changed and one of four modes can be	

	selected – Cool, Normal, Warm and Custom.
Color Control	Adjust individual R,G,B color balance.
Gamma	Select one of three pre-defined gammas: • Mode 1 : Shows normal gamma • Mode 2 : Shows higher gamma(brighter) • Mode 3 : Shows lower gamma(darker)

Image

Menu	Description	
Coarse	Removes noise such as vertical stripes. Coarse adjustment may move the screen image area. You may relocate it the center using the Horizontal Control menu.	
Fine	Removes noise such as horizontal stripes. If the noise persists even after fine tuning, repeat it after adjusting the frequency (clock speed).	
Sharpness	Sets the clarity of the image.	
H-Position	Changes the horizontal position of the display.	
V-Position	Changes the vertical position of the display.	

On-Screen Display (OSD)

Menu	Description	
Language	Changes the language used in the display menu.	
H-Position	Changes the horizontal position of the OSD.	
V-Position	Changes the vertical position of the OSD.	
Transparency	Changes the translucency of the background of the OSD.	
Display Time	The OSD menu will automatically turn off if no adjustments are made for a certain time period.	
	You can set the amount of time the menu will wait before it turns off.	

Setup

Menu	Description	
Image Reset	Image parameters are replaced with the factory default values.	
Color Reset	Color parameters are replaced with the factory default values.	

Information

Menu	Description	
Information	Shows the video source and display mode.	

Installation Instructions


Preparing for Installation

Important! Perform the following steps BEFORE Installation of the monitor into the panel.

- 1. Ensure that sufficient power is available.
- 2. Ensure that <u>sufficient space</u> is available to allow for <u>proper air flow</u> into and out of the unit.
- 3. Ensure that the air temperature around the unit (top and bottom) will not exceed the rated specifications of the unit.
 - The maximum rated temperature of the HIS-ML17 is 50°C (122°F)
 - Remember that heat rises the temperature at the top of the cabinet will be much hotter than at the bottom when the air is not circulating.
 - Also, remember that even though this product is designed to operate at 50° C, the life span of any electronic device is shortened when it is consistently operated at high temperatures. Therefore it is wise to take steps to keep the temperature of the ambient air around the unit as low as possible.
- 4. Ensure that the ambient humidity of the air around the unit <u>does not exceed the</u> rated specifications for the unit.
 - The maximum rated humidity for the HIS-ML17 is 90% non-condensing

Installation into Panel

- 1. Refer to the drawing below.
- 2. Locate position in panel for mounting of the monitor. Ensure that there is adequate space begin the panel. Allow extra space (0.5 in. behind and on each side) for air ventilation.
- 3. Cut a rectangular hole in the panel. Clean and deburr. Dimensions: 16.02" (406mm) W x 12.72" (323mm) H; +/- .020"
- 4. Separate the rear collar from the unit by removing the 12 nuts.
- 5. Insert the unit into the front of the panel and re-attach the collar.
- 6. Tighten <u>all</u> 12 nuts to a torque of 24 inch-pounds to assure a water-tight seal between the poron bezel gasket on the monitor and equipment panel. *HIS will not assume liability for damage to internal electronics due to improper installation.*

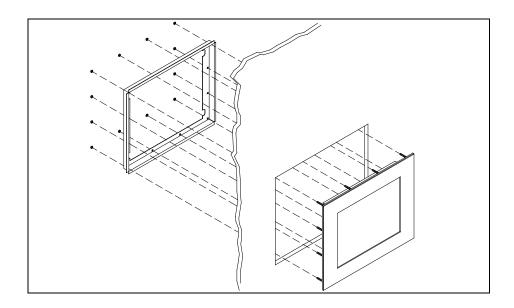

Touchscreen Driver Installation

The enclosed CD-ROM contains documentation and drivers for all major operating systems. To be sure you have the most current information, check the following Internet addresses:

http://HISmonitors.com/Touchscreen_Drivers.htm

Cleaning

CAUTION! DO NOT USE ABRASIVE MATERIALS SUCH AS PAPER TOWELS OR DIRTY SHOP RAGS ON THE DISPLAY AS IT WILL SCRATCH THE PROTECTIVE COATING. ALWAYS USE A SOFT CLOTH, PREFERABLY MADE OF COTTON.

Resistive Touchscreen model

Any standard glass cleaner can be used to clean the touchscreen. Always spray the glass cleaner on the cloth or towel and then clean the touchscreen. Glass cleaner sprayed directly on the monitor could possibly leak inside a non-sealed unit and cause damage.

Vinegar or ammonia will not hurt the touchscreen. Again, spray the cloth and then clean the touchscreen.

Tempered Anti-Reflective Glass Window

Use any standard glass cleaner as long as there is no abrasive or oily content. The anti-reflective coatings are physically part of the surface of the glass and resist degradation to the Military Specifications.

Acrylic Window


Monitors with acrylic protective windows can be cleaned in the same manner as the touchscreen or glass window.

Troubleshooting


Many possible causes. Try the following solutions.	Symptom	Check List	Solutions
 ing solutions. Change PC display resolution to 1280x1024 at 60 Hz refresh. Make sure the PC display resolution matches one of the factory preset timings in this manual. Unplug the power adapter to monitor and then plug it in again. Press monitor power button 			 tion matches one the factory preset timings shown in this manual. Recall factory setting. Refer to panel controls and OSD functions in this manual. Fine tune the picture by performing the following adjustments in this order – pitch, phase, and position. Refer to OSD functions in
Reset the monitor to the original	unstable image	, ,	 Press "Auto" button. Change PC display resolution to 1280x1024 at 60 Hz refresh. Make sure the PC display resolution matches one of the factory preset timings in this manual. Unplug the power adapter to monitor and then plug it in again. Press monitor power button again.

Drawings


Front and Side Views

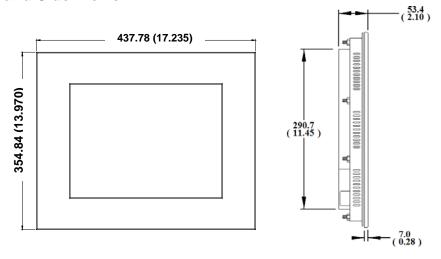

Rear View (Showing Cutout Dimensions)

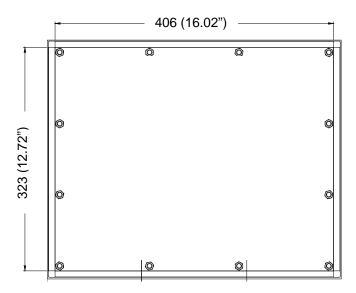

Rear and Bottom Views

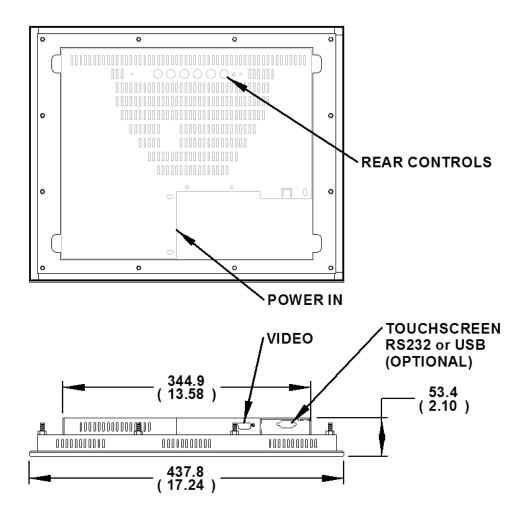

Specifications

Display

Туре	Thin-film transistor (TFT) Active Matrix Liquid Crystal			
Size	17" diagonal			
Image size	13.3" (338mm) x 10.6" (270mm)			
Native resolution	SXGA (1280 x 1024)			
Plug and Play	DDC1/2B compatible			
Minimum resolution	VGA (640 x 480)			
Pixel pitch	0.264mm x 0.264mm			
Number of colors	16.2 million			
Viewing Angle (Hori/Vert)	160° / 160°, typical			
Brightness (white)	300 nits (cd/m²) max			
Contrast ratio	600:1 (typical)			
Back light	Four CCFTs (Cold Cathode Fluorescent Tube); 50,000 hours brightness half-life; replaceable			
Screen protector (when not shipped with touch-screen)	Tempered glass to ANSI-Z97.1 SPEC; AR coated on both sides; 98% Transmission of light; 99% Reduction of glare; 53% UV blocking; 30% NIR Blocking; proprietary hydrophobic coating on outside reduces fingerprint smears, repels liquid spills and makes glass easy to clean.			

Video

Input connector	HD-15 (optional BNC input)			
Input signal format	RGB Analog video			
	0.7Vp-p Positive at 75 Ohm +-10%			
	Separate H/V sync, Composite H/V sync, Sync on green, TTL level positive or negative.			
Horizontal scan	30kHz – 81kHz			
Vertical scan	56Hz – 75Hz			
Optimum Resolution	1280 x 1024 @ 60 Hz			
Maximum Resolution	1280 x 1024 @ 75 Hz			
Response rate (typical)	8ms			

Electrical

Monitor input	100VAC – 240VAC (+/- 10%), 50/60Hz (+/- 3Hz)		
Power consumption	Less than 34W		
Power management	DPMS/energy star, < 1W		

Environmental

Temperature	0-50°C (consult factory for installation instructions when continuous 24/7 operation exceeds 40°C)			
Humidity	20% to 90% non-condensing			
Shock	30g (1/2 sine, 11 msec.)			
Vibration	0.006 inch p-p 15-57Hz, 1.0g 57-640Hz sine			
Altitude	Operating: up to 10,000 feet; Non-operating: up to 40,000 feet			

Compliance

Electrical	UL 60950 3 rd Edition, cUL recognized component; FCC Class A; CE
Environmental	RoHS

Functional

Panel controls (rear access)	Menu, MagicBright, Brightness Adjust, Enter, Auto, Power, Power Indicator	
OSD (On Screen Display) controls	Picture, Color, Image, OSD, Setup, Information	
Touch screen option	5-wire resistive system; emulates a mouse; Serial RS-232 and USB interface to host computer	

Enclosure

Туре	Panel mount; rear collar compresses gasket against par held by 12 M5 studs	
Panel rating	NEMA 12/4/4X (with proper installation) – built to IP65 standards	

Physical

Depth	1.8" behind panel maximum			
Bezel	Powder coated carbon steel – matte finish, black; or Stainless Steel			
Front bezel outside di- mensions	17.235" (437.78mm) W x 13.970" (354.84mm) H x 0.28" thick (not including gasket)			
Cutout dimensions	16.02" (406mm) W x 12.72" (323mm) H ; +/020"			
Net weight	Black Carbon Steel Model – 14.35 lbs. Stainless Steel Model – 14.20 lbs.			
Shipping weight	Black Carbon Steel Model – 19 lbs. Stainless Steel Model – 18 lbs.			

VGA Pin assignment

Pin No.	Signal	Pin No.	Signal
1	Red	9	No pin
2	Green	10	Ground
3	Blue	11	Ground
4	Ground	12	SDA
5	Ground	13	H. sync
6	Ground	14	V. sync
7	Ground	15	SCL
8	Ground		

Factory Preset Timing

Resolution	Horizontal Frequency (KHz)	Vertical Frequency (Hz)	Pixel Clock (MHz)	Sync Polarity (H/V)
IBM, 640 x 350	31.469	70.086	25.175	+/-
IBM, 640 x 480	31.469	59.940	25.175	-/-
IBM, 720 x 400	31.469	70.087	28.322	-/+
VESA, 640 x 480	37.500	75.000	31.500	-/-
VESA, 640 x 480	37.861	72.809	31.500	-/-
VESA, 800 x 600	35.156	56.250	36.000	-/-
VESA, 800 x 600	37.879	60.317	40.000	+/+
VESA, 800 x 600	46.875	75.000	49.500	+/+
VESA, 800 x 600	48.077	72.188	50.000	+/+
VESA, 1024 x 768	48.363	60.004	65.000	-/-
VESA, 1024 x 768	56.476	70.069	75.000	-/-
VESA, 1024 x 768	60.023	75.029	78.750	+/+
VESA, 1152 x 864	67.500	75.000	108.00	+/+
*VESA, 1280 x 1024	63.981	60.020	108.00	+/+
*VESA, 1280 x 1024	79.976	75.025	135.00	+/+

^{*} Factory recommended timings for best picture quality

Warranty Statement

Who is Covered?

This warranty covers the purchaser of this product only and is not transferable without our written consent.

What Does This Warranty Cover and What is the Period of Coverage?

The warranty remains in force for a three year period beginning on the date we invoice you for the product unless it is a keyboard, for which the warranty period is one year. If HIS repairs or replaces a product under warranty, its warranty term is not extended.

What Will We Do to Correct Problems and How Do You Get Service?

We will repair or replace (at our sole option) any part of the unit which proves to be defective. Replacement parts may be new or refurbished and will meet the same specifications of the original parts or unit. We will return the product to you by the shipping method we choose in the U.S.A. at our expense. You must pay for shipments to locations outside of the U.S.A. In order to receive warranty service you must get prior approval from HIS. To request warranty service you can telephone us at 678-762-9790 or send an email to service@HISmonitors.com. If we determine that warranty service is needed we will give you a Return Material Authorization (RMA) number. This RMA number must be conspicuously marked on the outside of the shipping box. HIS will not accept shipments not accompanied by the RMA number. You must ship or deliver the product to HIS Freight prepaid.

What Does This Warranty Not Cover?

This warranty does not cover equipment which has been damaged due to misuse, abuse or accident such as: operating the equipment outside of published specifications; exposure to chemicals or gasses not covered by specified NEMA standards; displaying fixed images for long periods of time resulting in afterimage effects; improper or unauthorized repair by anyone other than HIS or a service agency authorized by HIS to perform such repairs; fire, flood, "acts of God", or other contingencies beyond the control of HIS.

HIS' responsibility for malfunctions and defects in hardware is limited to repair and replacement as set forth in this warranty statement. HIS shall not be liable for direct, indirect, incidental, consequential, or other types of damages resulting from the use of any HIS product other than the liability stated above. These warranties are in lieu of all other warranties express or implied, including, but not limited to, the implied warranties of merchantability or fitness for a particular purpose. Some states do not allow the exclusion of implied warranties or the limitation or exclusion of liability for incidental or consequential damages so the above exclusions or limitations may not apply to you. You are cautioned that the performance of this product can be affected by many factors, such as system configuration, software, application, and operator control of the system. It is your responsibility to determine suitability of this product for your purpose and application.

(This page left blank.)

Hope Industrial Systems, Inc.

1325 Northmeadow Parkway Suite 100 Roswell, GA 30076

www.HISmonitors.com